



DMX DC-2448

DMX controller

Musikhaus Thomann
Thomann GmbH
Hans-Thomann-Straße 1
96138 Burgebrach
Germany
Telephone: +49 (0) 9546 9223-0
E-mail: info@thomann.de
Internet: www.thomann.de

17.08.2018, ID: 216405

Table of contents

1	General notes.....	5
1.1	Further information.....	5
1.2	Notational conventions.....	5
1.3	Symbols and signal words.....	6
2	Safety instructions.....	7
3	Features.....	9
4	Installation.....	10
5	Starting up.....	11
6	Connections and controls.....	12
7	Operating.....	17
7.1	Starting programming.....	17
7.2	Editing.....	19
7.3	Operation.....	22
8	MIDI and DMX channel settings.....	24
8.1	MIDI.....	24
8.2	DMX.....	26
9	Quick Start Guide for the main functions.....	28
9.1	Reversing scene direction.....	28
9.2	Setting Fade time.....	28
9.3	Using TAP SYNC.....	28
9.4	Using MASTER fader.....	29
9.5	Selecting 'Single' mode.....	29
9.6	'Mix' mode.....	29
9.7	Dimmer Display.....	29
9.8	BLIND and HOME.....	30
9.9	PARK.....	30
9.10	ADD/KILL.....	30
9.11	Double Preset.....	30
10	Technical specifications.....	32
11	Plug and connection assignments.....	33
12	Protecting the environment.....	34

